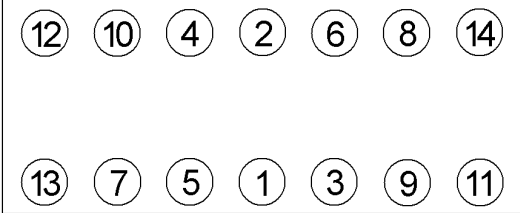


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		058.191 passend für / suitable for adaptable à / adaptable a BMW	 Das Original
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 234.640 M 12x1,5x217			
Anziehen/ Tightening/ Serrage/ Apriete	* ☐ ☒ ☒	80 Nm 50 Nm 90° 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) desserrer et serrer vis par vis durée de tassement angle de serrage
	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor Mot. M57N2 D30 →02/2006 E90/E91 330d, xd E60/E61 530d, xd E65/E66 730d, Ld E83 X3 3.0d ✚ 1,67 mm 3 Löcher, Holes, Trous, Agujeros, Fori			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*058.191*	