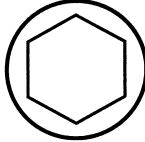


Anziehvorschrift für Zylinderkopf		729.141		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse		Chevrolet / GMC / Cadillac			
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
		10 6 2 4 8 RH 9 5 1 3 7 9 5 1 3 7 LH 10 6 2 4 8			
Anziehen/ Tightening/ Serrage/ Apriete		* Pos 1-10: 80 Nm ➤ Pos 1-10: 90° ➤ Pos 1-8: 60° ➤ Pos 9 LH: 40° ➤ Pos 9 RH: 60° ➤ Pos 10: 60°			
Zeichenerklärung / Explanations / Explication / Explicacion					
✳	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
Ø: 97,7 mm; $\frac{1}{2}$: 1,33 mm					
Mot: L83 5,3 ltr V8 OTTO					
Cheyenne, Escalade, Sierra, Silverado					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*729.141*		