

Montageanleitung | Installation Instruction | Notice de montage

Istruzioni di montaggio | Instrucciones de montaje

Instruções de montagem | Installationsanvisning | Montagehandleiding

de Innenraumfilter

en Cabin filter

fr Filtre d'habitacle

it Filtro abitacolo

es Filtro ventilación para interior

pt Filtro de cabine


sv Kupéfilter

nl Interieurfilter

6000161877



BOSCH

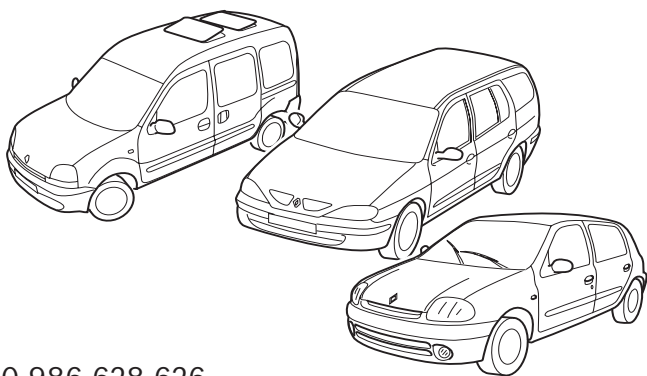

0 986 628 626

Renault Mégane

Break, Grandtour

07.98 -->

Cabrio/Classic/Coupé




04.98 -->




Renault Kangoo

10.97 -->




Renault Clio II




03.98 -->

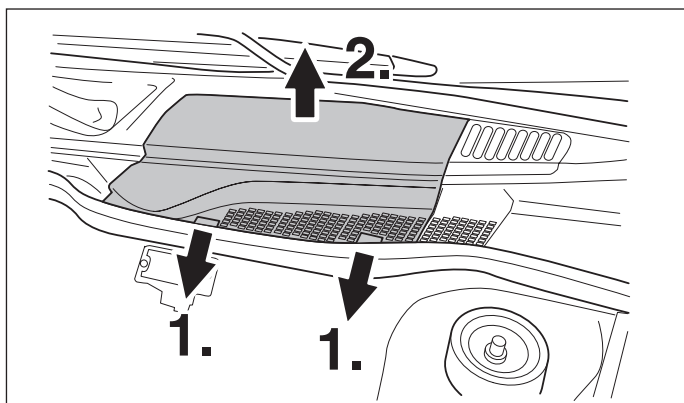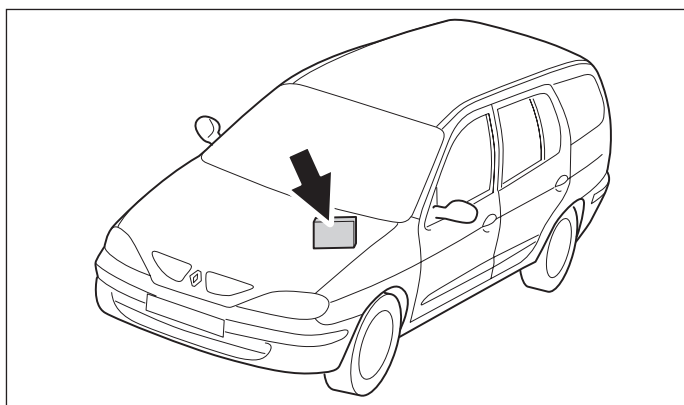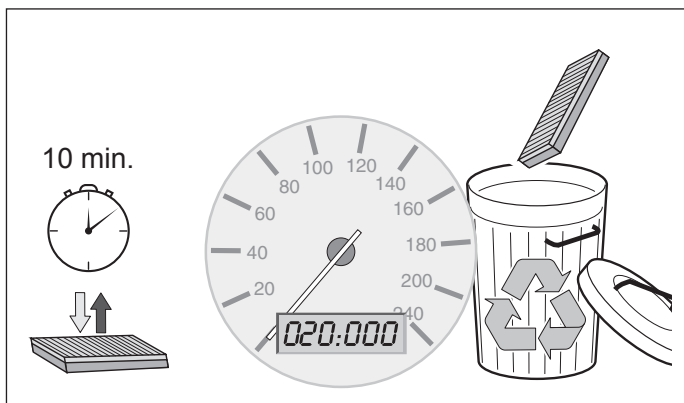

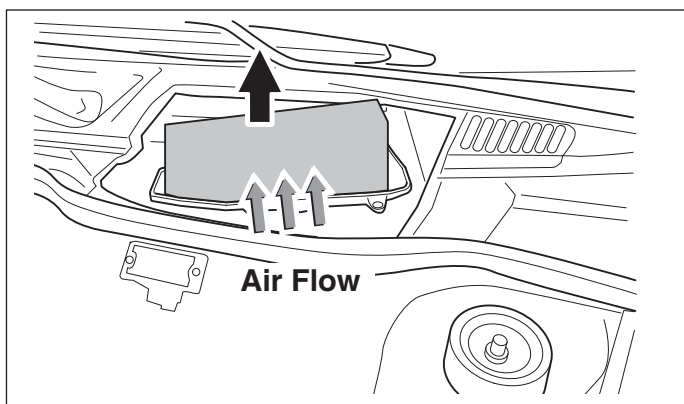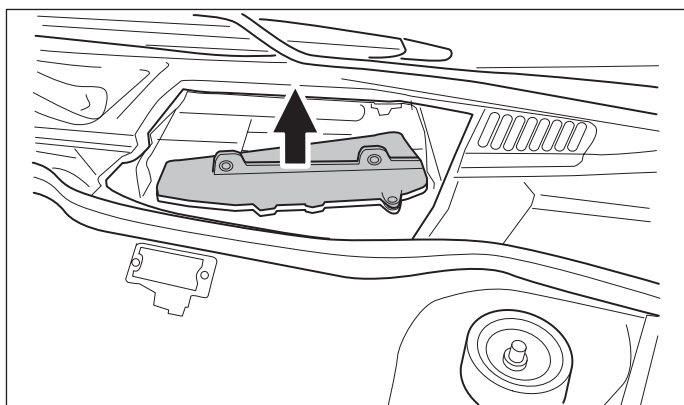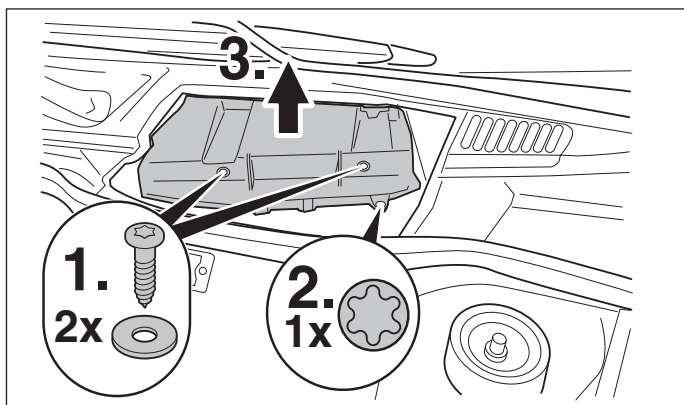

20 min.

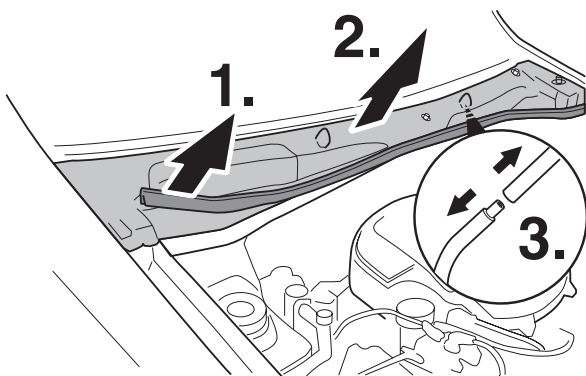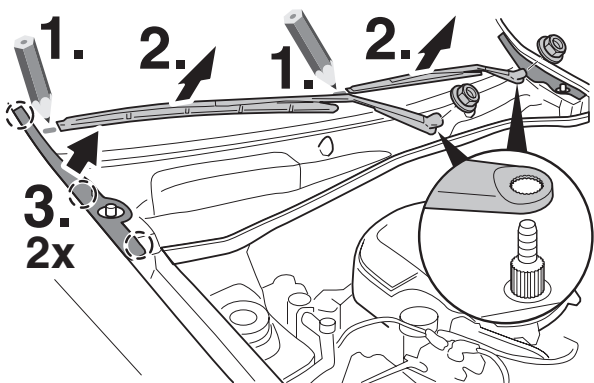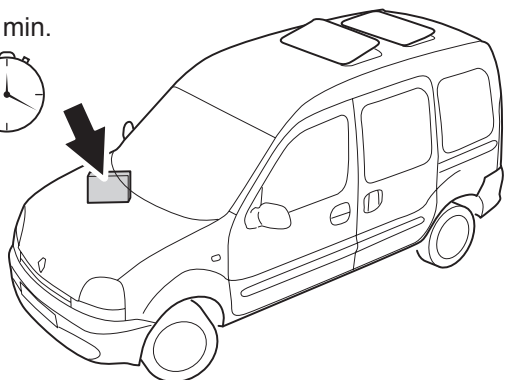

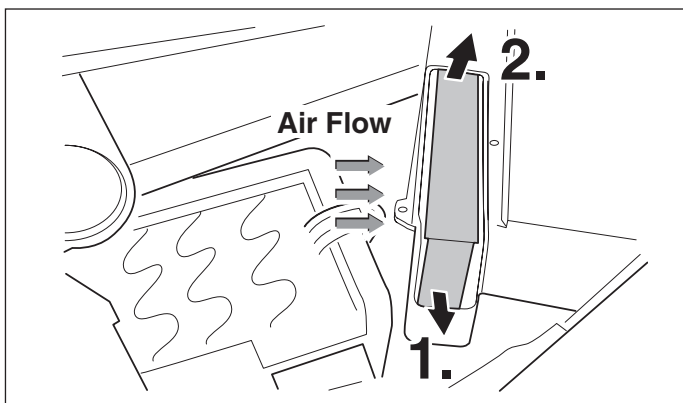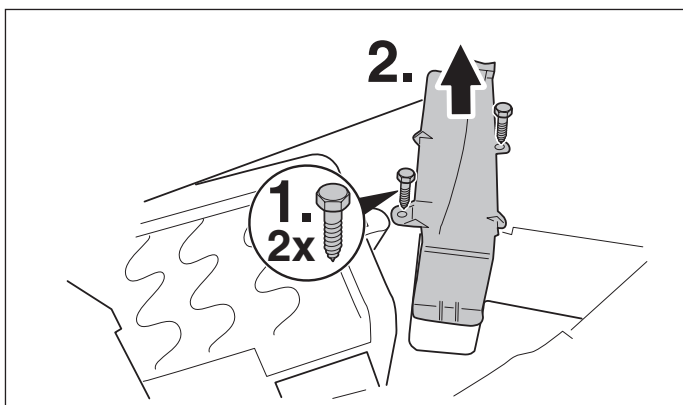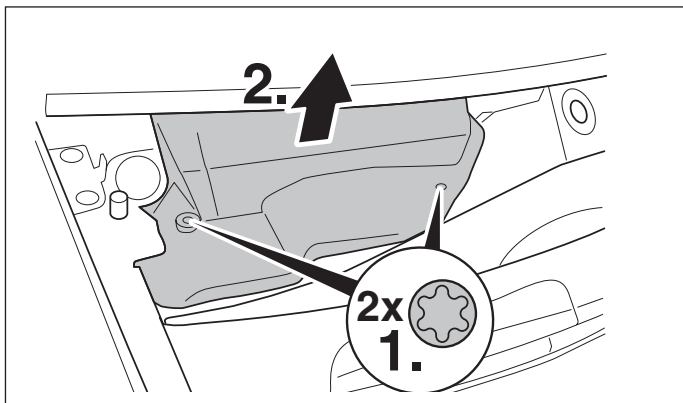

5 min.

