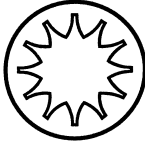


Anziehvorschrift für Zylinderkopf		252.750		
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a VW Das Original		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
864.450 M 12x1,75x209				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	30 Nm 40 Nm 90° 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✱ 1,63mm Ø 82mm 2-Loch/holes/trous/agujero				
Mot.: 2,0l TDI EA288 evo				
A4, A5, A6, Q5				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*252.750*	