


Anziehvorschrift für Zylinderkopf		892.327	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Audi	

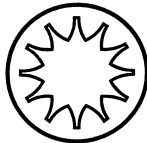

819.875
M 12 x 115

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

9	5	3	1	7	11
12	8	2	4	6	10

Anziehen/ Tightening/ Serrage/ Apriete	*	40 Nm
		60 Nm
	➤	90°
	➤	90°
	★	80°C
	➤	90°
	➤	1.000 km
	➤	90°

Zeichenerklärung / Explanations / Explication / Explicacion

★	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

76,5 Ø

Mot. CN, 5 Cyl., 2,0 l, 51,5 kW (70 PS)
DE, 5 Cyl., 2,0 l, 66 kW (90 PS)

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*892.327*
--	-----------