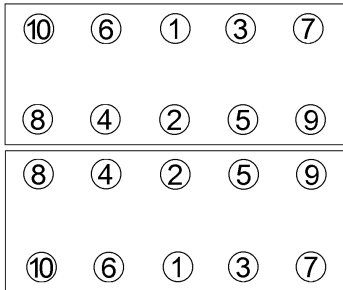


Anziehvorschrift für Zylinderkopf		149.354		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas		Audi			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
130.120 M12x1,5x159					
Anziehen/ Tightening/ Serrage/ Apriete		* ➤ ➤	35 Nm 60 Nm 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
✱ 1,2 mm, Ø 83,8, 3 Löcher/holes/trous/agujeros Cyl. 5-8					
Mot.: BVN, BMC, BTR, CEMA 4,2 ltr. TDI					
Audi A8, Q7					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*149.354*		