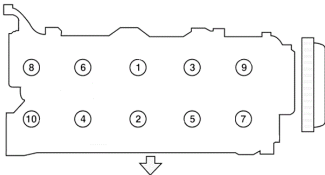


Anziehvorschrift für Zylinderkopf		448.440		Das Original		
Tightening Instructions for Cylinder Head						
Instructions de serrage pour culasse						
Prescripciones de apriete para culatas						
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
						
Anziehen/ Tightening/ Serrage/ Apriete	* ➤	30 Nm 73 Nm 73 Nm 90°				
Zeichenerklärung / Explanations / Explication / Explicacion						
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor						
⚙ 0,5 mm, Ø 89 mm						
Mot.: ED3, EDG 2,4 Ltr. 16V						
Compass, Sebring, Journey, Patriot						
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*448.440*			