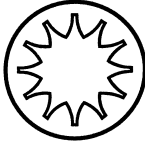
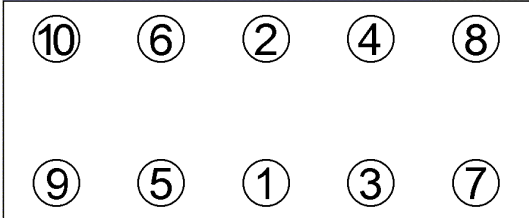


Anziehvorschrift für Zylinderkopf		425.080		 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas		Mercedes-Benz		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 760.060 M 12x1,75x160				
Anziehen/ Tightening/ Serrage/ Apriete	* M 12 55 Nm ➤ 90° ➤ 90°	M 8 * 25 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ ☐ ● ➤	neue Zylinderkopfschrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor 93,2 mm Ø, -/1,75 mm ÷ rechts/right 400 SE, SEL, S 420 (C/W 140) M.B.119.971 ab Mot.017486> 400 E, E 420 (W 124) M.B.119.976 ab Mot.010592> S 420 (C/W 140) M.B.119.981				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*425.080*	