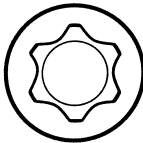


Anziehvorschrift für Zylinderkopf		118.051 passend für / suitable for adaptable à / adaptable a Renault	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 759.370 M 10x1,5x99/113			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ● ☐ ☐	20 Nm 100°± 6° 3 min Pos. 1-2: 20 Nm + 100°±6° Pos. 3-6: 20 Nm + 100°±6°	Pos. 7-10: ☐ 20 Nm + 100°±6°
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor ⚙ 1,75 mm, Ø 77 mm Mot.: E5F 710,716, E6J 700,701,706,712, 713,718,760, E7F 700,706, E7J 624, 626,634,635,706,718,719,720,724, 726,728,742,745,754 R19, Clio, Kangoo, Megane, Rapid			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*118.051*	