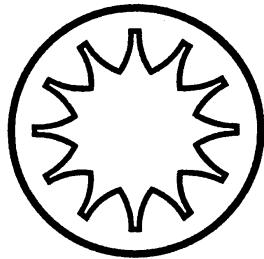
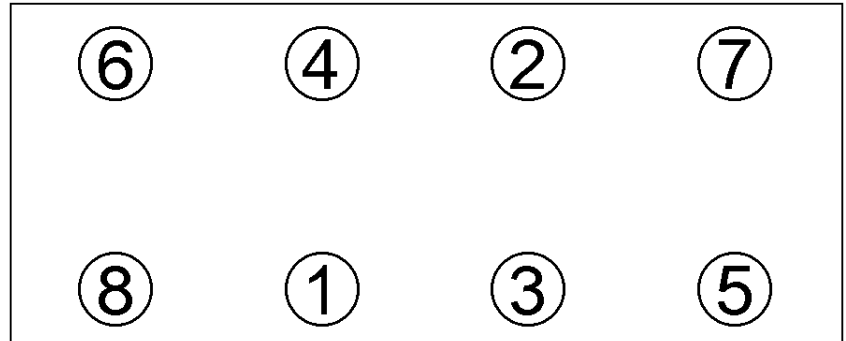


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****219.590**passend für / suitable for  
adaptable à / adaptable a**Audi / Skoda / VW****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo527.770  
M 12x1,75x206

Anziehen/	⊙ 30 Nm
Tightening/	90 Nm
Serrage/	> 90°
Apriete	> 90°

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

1,4 TDI 3 Zyl. 3 Loch 1,71mm

Mot: CUSA, CUSB, CUTA,  
CYZA, CYZB  
55-77 KW (75-105 PS)

Polo, Al, Fabia

**Elring-Serviceteam**Fon +49 7123 724 799  
Fax +49 7123 724 798  
[service@elring.de](mailto:service@elring.de)

24/11/12

**\*219.590\***