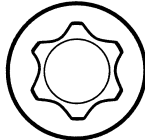


Anziehvorschrift für Zylinderkopf		130.712 passend für / suitable for adaptable à / adaptable a Citroën, Peugeot	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 152.550 M 12x1,5x123			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	20 Nm 60 Nm 90° 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C) calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
✚ 1,5 mm, Ø 84 mm, 1 Loch/hole/trou/agujero			
Mot.: DW8, DW8B, 1WZ, WJY, WJZ 1,9 ltr. Diesel 44-51 KW			
Berlingo, C15, Jumpy, Xsara, 206, 207, 306, Expert, Partner Fiat Scudo, Toyota Corolla			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*130.712*	