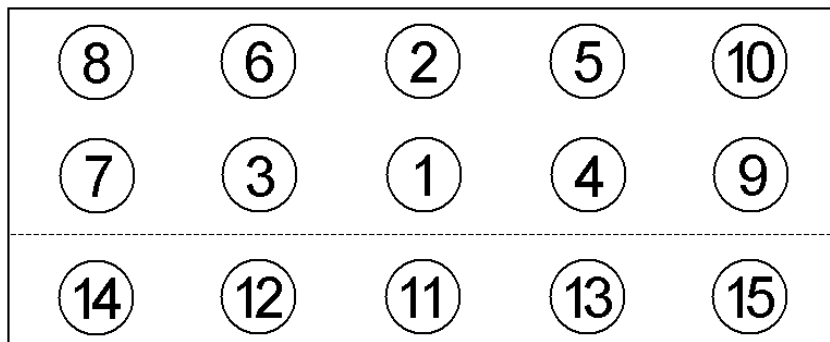


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****724.770**passend für / suitable for  
adaptable à / adaptable a**Fiat****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

760.510

M 12x1,25x134

Anziehen/  
Tightening/  
Serrage/  
AprieteM 12:  
● 50 Nm  
100 Nm  
➤ 90°  
➤ 90°M 8:  
● 30 Nm**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 83 mm; ÷: 1,75 mm

Mot: 1,7-1,9 ltr Diesel/Turbodiesel

42-68 kW (57-92 PS)

145, 146, 155, Dedra, Delta, Prisma

Ducato, Duna, Fiorino, Palio, Punto, Regata,

Ritmo II, Strada, Talento, Tempra, Tipo, Uno

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/01/22

**\*724.770\***