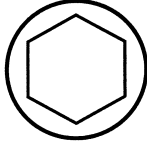
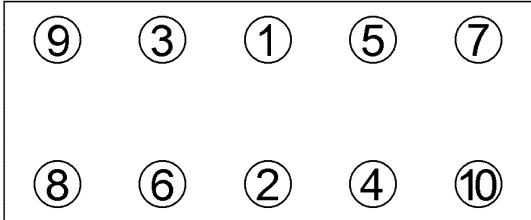


Anziehvorschrift für Zylinderkopf			199.400		 Das Original
Tightening Instructions for Cylinder Head			passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas			Nissan		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
					
710.020 M11x118x1,5					
Anziehen/ Tightening/ Serrage/ Apriete			* 31 - 37 Nm ➤ 180° - 190° ☐ 31 - 37 Nm ➤ 90° - 95° ➤ 90° - 95°		
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
✱: 1,25mm					
Mot: CD20, CD20T					
2,0 ltr. 55-66 kW (75-90 PS)					
Almera I, Primera					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*199.400*		