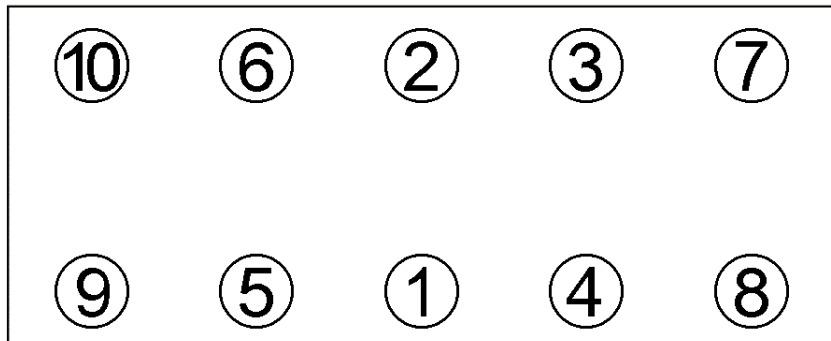


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****569.842**passend für / suitable for  
adaptable à / adaptable a**Ford/PSA/Mazda****Das Original**Schraubenkopf / Head shape    Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo330.390  
M 11x1,5x147Anziehen/  
Tightening/  
Serrage/  
Apriete
 20 Nm  
 40 Nm  
 260°
**Zeichenerklärung / Explanations / Explication / Explicacion**

|   |   |                              |                                |                                       |
|---|---|------------------------------|--------------------------------|---------------------------------------|
|   | neue Zylinderkopfschrauben verwenden        | use new cylinder head bolts  | utiliser des vis neuves        | emplar tornillos nuevos               |
| * | Warmlauf (80°C)                             | warm up time (80°C)          | chauffage (80°C)               | calentamiento (80°C)                  |
|   | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
| ● | Setzzeit                                    | relaxation time              | durée de tassement             | tiempo de espera                      |
| ➤ | Drehwinkel                                  | torque angle                 | angle de serrage               | ángulo de giro                        |

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Dicke 1,45 mm    5 Kerben

Ford: Fiesta/Fusion/Focus

1,6 TDCI    66KW/80KW

PSA: 206/307/407/C3/Berlingo/

C4/Xsara Picasso/C5

1,6 HDI    66KW/80KW

Mazda: 3 / 1,6 DI Turbo / 80kW

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

**\*569.842\***