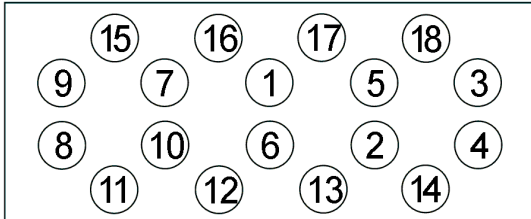


Anziehvorschrift für Zylinderkopf		164.841		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for			
Instructions de serrage pour culasse		adaptable à / adaptable a			
Prescripciones de apriete para culatas		Ford			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
Anziehen/ Tightening/ Serrage/ Apriete		M 14 (1-10): * 30 Nm ➤ 70° ➤ 70°		M 12 (11-14): * 30 Nm ➤ 90°	M 12 (15-18): * 30 Nm ➤ 90°
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
- / 1,62 mm ÷, 98 mm Ø					
2,5 Ltr. Turbo-Diesel, Mot. VM 25, 4 Cyl.					
85 kW (115 PS)					
Granada ab 08/1993>					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*164.841*		