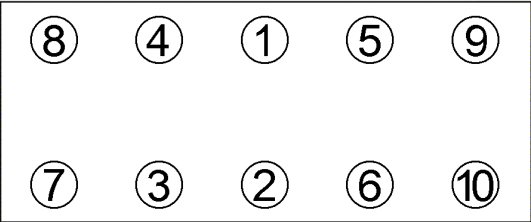


Anziehvorschrift für Zylinderkopf		447.132		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
passend für / suitable for adaptable à / adaptable a		Renault	Das Original	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo				
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
759.180 M 12x1,5x113				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ● □	30 Nm 80°±4° 3 min 25 Nm + 213°±7°		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 79 mm; ⌀: 1,80 mm 3 Löcher/holes				
Mot: F8M 700/720/730 1,6 ltr 40 kW (55 PS)				
R 5, R 9, R 11, Rapid, Express Diesel				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*447.132*		