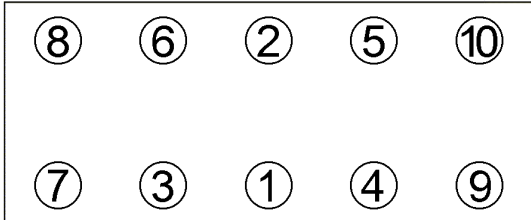


Anziehvorschrift für Zylinderkopf		180.140		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas		Fiat			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
148.110 M 9 x 91					
Anziehen/ Tightening/ Serrage/ Apriete		* 20 Nm 40 Nm ➤ 90° ➤ 90°			
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
÷ 1,50 mm, Ø 65,9 mm					
Cinquecento 0,9 Ltr.		1991>1998			
Panda 0,9 Ltr.		1993>			
Seicento 0,9 Ltr.		1998>			
Mot. 170A1.000, 117A1.000, 1170A1.046,					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*180.140*		